



- 1 Loosen the 4 captive screws on the battery door with a #1 Phillips screwdriver. Remove the door. CAUTION: The handheld is not sealed when the door is removed.
- 2 Place the battery pack into the compartment. Be sure to line up the + and .
- 3 Replace the battery door and tighten the screws.
- 4 Slide the correct plug for your location onto the AC power charger. Plug the charger into a wall socket and the DC connector on the handheld.
- 5 The handheld powers on and several screens appear. When the Update Time screen is shown make adjustments if needed and select OK.
- 6 Charge the battery pack at room temperature for 5 hours.

