

archer² bumperkit



replacement instructions

P/N: 24079.00 Copyright December 2013, Juniper Systems, Inc.
Information is subject to change without notice. Juniper Systems and Archer² are trademarks of Juniper Systems, Inc.



tel: 435.753.1881 | web: www.junipersys.com

1132 W. 1700 N. Logan, UT 84321

Contents of Bumper Replacement Kit

The Archer² bumper replacement kit includes the following items:


- Standard Archer²: One bumper for the top and one bumper for the bottom
- Barcode Archer²: One top bumper with a viewing window for the barcode reader and one bumper for the bottom
- Instruction sheet

Removing the Bumpers

1. Pull one front corner of the bumper away from the unit.
2. Pull the bumper off the unit.

Installing the Bumpers

Note: The Archer² bumpers are designed with a small nub inside the corner of the bumper. This must fit inside the mating hole on the Archer². Note: Color added for highlighting

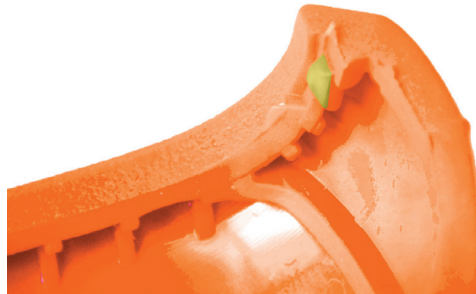

1. Place one front corner of the bumper slightly above the front corner of the Archer² as seen in the figure.



2. Push the bumper down so that the nub is inserted into the mating hole.
3. Press the first back corner of the bumper into the Archer².
4. Press along the front and back edges of the bumper to seat them into the Archer².
5. Press the second back corner into the Archer².
6. With the rest of the bumper seated, lift and fold back the second front corner of the bumper to expose the nub on the inside of the corner.



7. Pull and stretch the bumper so that the front corner can be positioned slightly above the second front corner of the Archer².
8. Once positioned, insert the nub into the mating hole.
9. Remove and replace the remaining bumper in the same manner.

